




audio-technica®

always listening™


logan helps - techsupport@audio-technica.co.uk

*inside view


HRS Dynamic
PRO8HE

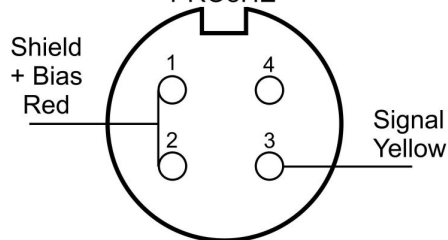


HRS Condenser 3 wire

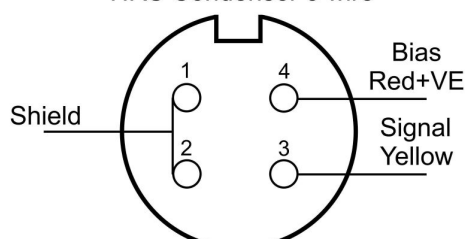


HRS Condenser 2 wire

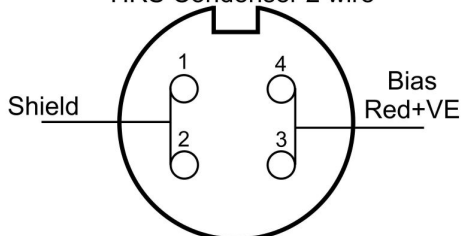


HRS Condenser 2 wire Attenuated
AT830, AT805 use 2K2. MT838 use 3K3

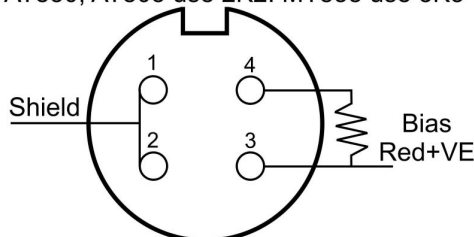


AT8319 JACK to HRS

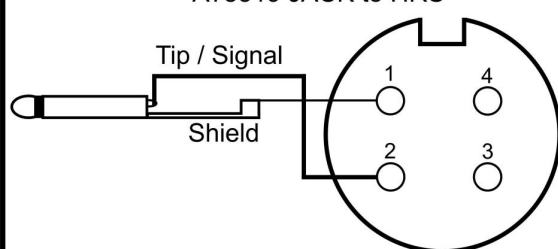

AT8317 XLRF to HRS

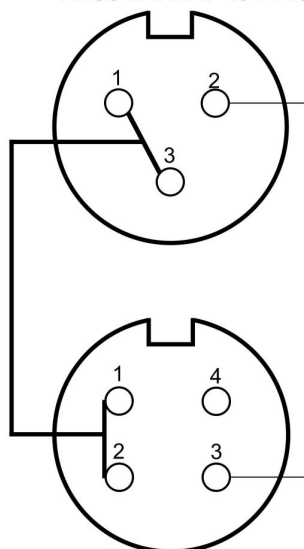


HRS Belt Pack Transmitter input

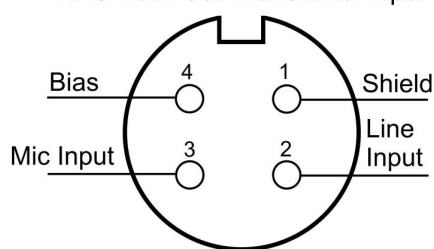


Belt pack bias voltage rating

Series	Belt pack	Bias
200	T201	8.7V
300	T27	8.7V
500	WT15	3.2V
700	T701	6.2V
1000	T31	3.2V
1100	T27	8.7V
1200	T35	8.7V
1400	T51	8.7V
1600	T161	9.6V
1800	T1801	5V
2000	T210	5V
3000	T310	5V
4000/5000	T1000	9.5V
7000	T75	8.7V


T101 Belt Pack Input

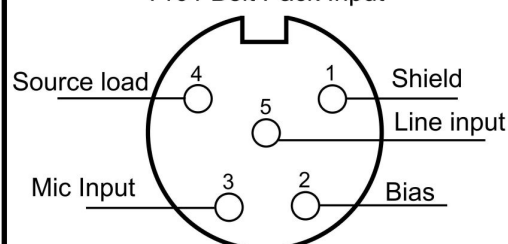


TA5F Dynamic T101

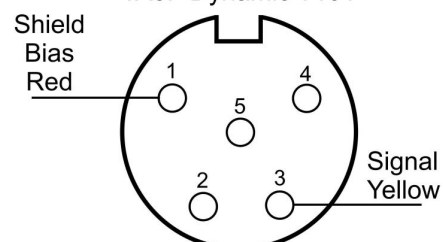


TA5F Condenser T101

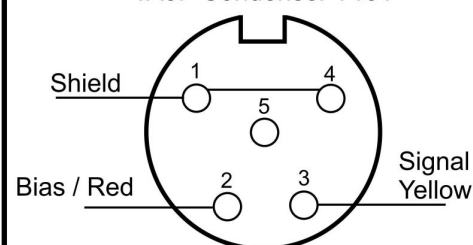


AT895 XLR 7PIN

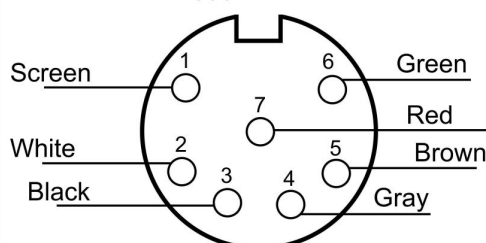


TA3F for Audio Technica power modules

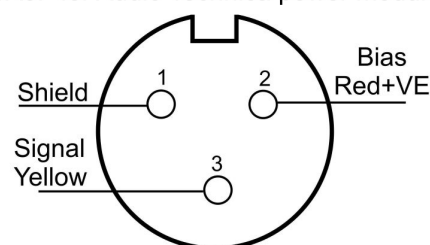

XLRM internal microphone
and power module connector

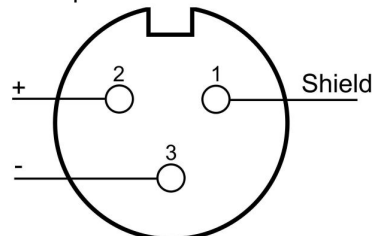


5PIN XLR for AE2500 / AT815ST / AT835ST

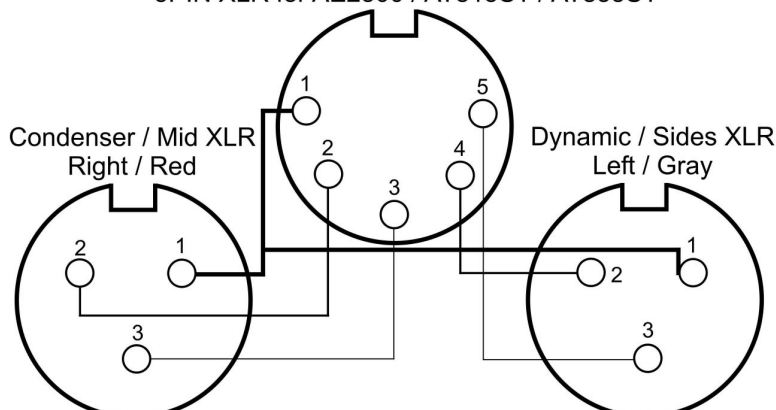


CHIAYO

AT831 for Chiayo TA4F

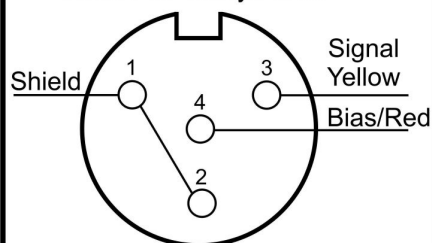


SENNHEISER

AT892cL4 for Sennheiser (LEMO 3PIN)
Components within to AT892cL4 - rewire only
Not for use with any other AT892

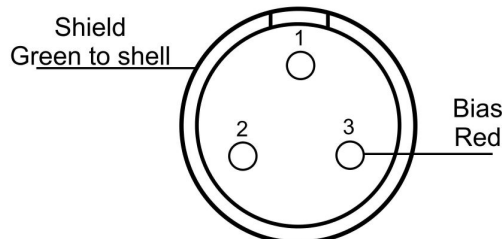


AT892cLM3 to mini-jack for Sennheiser

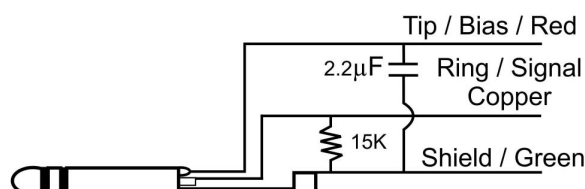


TRANTEC

Trantec - S1000 Beltpack
PRO8HE dynamic to LEMO 4PIN

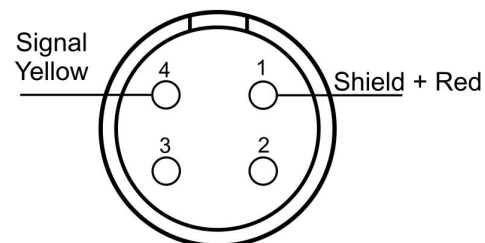


Trantec transmitter
3 wire condenser for LEMO 4PIN

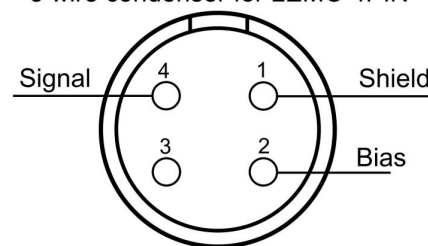


LECTRO-SONICS

AT892cT5 for Lactrosonics (TA5F)

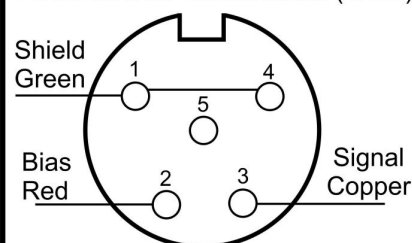


SHURE

AT892cT4, AT899 (TA4F) for Shure

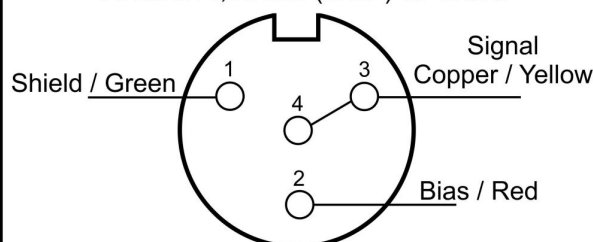


Trantec transmitter
2 wire condenser for LEMO 4PIN

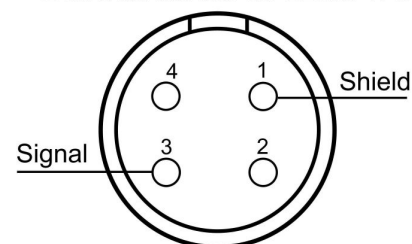


SABINE®


AT899c for Sabine SW70 (TA4F)

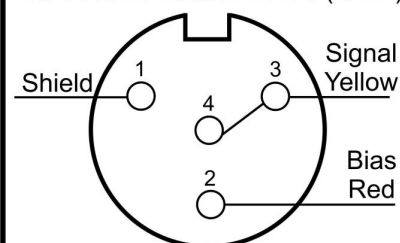

AT892c to TOA WM4300 TA4F

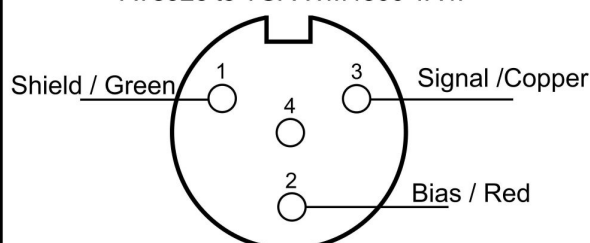

AT892c to TOA WM4310
must use TOA size mini-jack

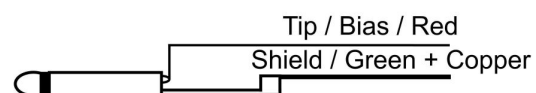

TOA